股票代码:605369



浙江拱东医疗器械股份有眼公司

Zhejiang Gongdong Medical Technology Co., Ltd.

Add: 浙江省台州市黄岩北院大道 10号 Tel: 0576-84051777 84051888 84051999

Fax: 0576-84050345

E-mail: xsh @ chinagongdong. com **Http:**//www.china-gongdong.com

Add:NO.10, Beiyuan, Ave., Huangyan, Taizhou,Zhejiang, China
Tel:0086-576-84115678
Fax:0086-576-84050789 P.Cl318020
E-mail:crm@chinagongdong.com
http://www.chinagongdong.com

服务热线:800 8576 401



[版权所有翻版必究]

GONGDONG MEDICAL

Smart Manufacturing System Solutions

智慧制造系统解决方案

药品包装材料

Drug packaging materials





浙江拱东医疗器械股份有限公司,前身可追溯到1985年。是一家专业从事药品包装材料及一次性医用耗材的研发、生产和销售的高新技术企业,产品广泛应用于临床诊断和护理、科研检测、药品包装等领域。

公司一贯重视产品的研发和技术创新,不断提升生产技术和工艺水平,严格遵循 GMP (药品生产质量管理规范)、医疗器械质量管理规范等要求,建有药包材、医疗器械、医用耗材等专用生产车间及配套实验室,并建立了完善的质量控制体系。公司已通过 ISO13485 质量管理体系认证,多个产品通过欧盟 CE 认证,一次性使用无菌阴道扩张器及锐器收集桶产品获得美国 FDA 510 (k) 许可。凭借高质量的产品和优质的服务,公司获得了境内、外客户的认可,产品覆盖了境内绝大部分省市,并销往北美洲、亚洲、南美洲、非洲、欧洲等多个国家和地区。

拱东人将坚持以"从优秀到专业"的高标准严格要求自己,在创新技术、管理、团队培养等方向不断提升,以 国内和国际的先进管理理念,强化公司的全企业、全过程和全员管控力度,力求不断发展与创新。坚持实施"走 出去"战略,大力实施名牌战略,以先进技术生产优质产品,提供一流服务,赢得更多的市场认可。 Zhejiang Gongdong Medical Technology Co., Ltd., founded in 1985.Gongdong is a high-tech enterprise specializing in the R&D, production and sales of drug packaging materials and disposable medical consumables. Products are widely used in clinical diagnosis and nursing, scientific research testing, drug packaging materials and other fields.

Gongdong has always attached importance to product R&D and technological innovation, continuously improves production technology and process level, strictly follows the requirements of GMP (Good Manufacturing Practice for Pharmaceuticals), Medical Device Quality Management Practices, etc., and has built special production workshops and supporting laboratories for drug packaging materials, medical equipment, medical consumables, etc., and a complete quality control system has been established. Gongdong has got the certificate of ISO13485, products of many series are CE marked. Disposable sterile vaginal speculum and sharps containers are FDA approved and 510(K) resisted. With high-quality products and services, Gongdong has been recognized by domestic and foreign customers. The products cover most provinces and cities in China and are sold to North America, Asia, South America, Africa, Europe and other countries and regions.

Gongdong' s employees will adhere to the high standards of "From Excellent To Professional" and strictly demand themselves. Gongdong continues to improve in the direction of innovative technology, management, and team training. With domestic and international advanced management concepts, it strengthens the company's entire enterprise, entire process and full staff management and control, and strives for continuous development and innovation. Persist in the implementation of the "Going Global" strategy, vigorously implement the famous brand strategy, produce high-quality products with advanced technology, provide first-class services, and win more market recognition.

ONLY THE BEST CAN BE BETT R





我们为各我们为各药品生产企业、药品研发机构专业定制高要求的药品包装材料

We professionally customize high-demand drug packaging materials for various pharmaceutical companies and R&D institutions.

| 登记号 Register number | 品种名称 Product name | 更新日期 Updated date | 与制剂共同审批审批结果 Joint approval result with preparation | 备注 Pn Remark |
|------------------------|--|----------------------|---|--|
| B20210000267 | 聚丙烯阴道给药器 PP Vaginal drug applicator | 2021-04-28 | 1 | |
| B20200001220 | 牙科用聚丙烯给药器 PP drug applicator for dental use | 2021-02-25 | I | |
| B20200000805 | 阴道用聚丙烯给药器 PP Vaginal drug applicator | 2020-10-13 | I | |
| B20200000137 | 口服液体药用瓶盖(含垫片) Oral liquid medicinal bottle cap (including gasket) | 2020-07-24 | I | |
| B20200000386 | 口服药用低密度聚乙烯瓶塞 LDPE Oral medicinal bottle stopper | 2020-05-28 | I | |
| B20200000385 | 聚乙烯口服给药器 PE Oral drug applicator | 2020-05-28 | А | |
| B20190006388 | 复方酮康唑用高密度聚乙烯瓶 HDPE bottle for compound ketoconazole | | А | 国药包字 20120588 State Drug Packing Material Administration Approve NO:: 20120588 |
| B20190006280 | 口服液体药用聚酯瓶 PS Oral liquid medicinal bottle | | Α | 国药包字 20130122 State Drug Packing Material Administration Approve NO.: 20130122 |
| B20190005882 | 口服固体药用高密度聚乙烯瓶 HDPE Oral solid medicinal bottle | | Α | 国药包字 20130717 State Drug Packing Material Administration Approve NO.: 20130717 |
| B20190005670 | 阴道用聚丙烯给药器 PP Vaginal drug applicator | | Α | 国药包字 20140075 State Drug Packing Material Administration Approve NO.: 20140075 |
| B20190003417 | 外用软膏剂用聚丙烯热封垫片瓶 PP heat-sealed gasket bottle for external ointment | | А | 国药包字 20170265 State Drug Packing Material Administration Approve NO.: 20170265 |
| B20180000397 | 阴道用聚丙烯给药器 PP Vaginal drug applicator | | ı | |
| B20180001772 | 阴道用聚丙烯给药器 PP Vaginal drug applicator | | А | |
| B20170001119 | 聚丙烯预灌封阴道用给药器 PP Prefilled vaginal drug applicator | | | CBS1200315 |
| | | | | |

Smart Manufacturing System Solutions

智慧制造系统解决方案

经过三十余年在一次性医用耗材领域及药品包材的研究和探索, 拱东在数字化工厂的基础上, 充分利用物联网技术、多重先进技术和高精设备, 根据客户的特定需求, 灵活为每个客户定制各种高精度、高难度的高端产品, 形成智慧制造和智慧生产。



SMART FACTORY







Technical workshop technical support

产品研发及模具制造

技术研讨 技术支持

Technical Seminar & Technical Support

拱东十分重视技术人才队伍的培养,由从业经验普遍在10年以上的技术团队来完成产品设计、模具设计和制造以及注塑工艺设定。对于发展,我们从不止步,通过参加各类技术展会及相关研讨会,邀请业内具有品牌效应的供应商分享前沿技术经验,以及与国外顾问公司开展合作,拱东在内部培训,实施、推广科学注塑技术 (Scientific Molding Technology) 等应用方面,取得了显著的效果。





Product development and mold manufacturing

Gongdong attaches great importance to the training of technical talents. A technical team with more than 10 years of experience will complete product design, mold design and manufacturing, and injection process setting. For development, we never stop. Gongdong invites branded suppliers in the industry to share cutting-edge technology experience by participating in various technical exhibitions and related seminars. At the same time, through cooperation with foreign consulting companies, Gongdong is in-house In terms of training, implementation and promotion of the application of Scientific Molding Technology, very good results have been achieved.



团队合作 快速响应

Teamwork & Quick Response

将技术用于实际,从实际实现改进,拱东技术团队致力于同各部门协作商议,共同攻克各类技术 难关。同时,我们不忘与客户积极沟通交流,以客户需求为第一生产要素,满足客户需求的同时 提出技术改进,严格控制模具完成时间,做到高研发水平、高生产效率与高客户满意度。



标准化 依规定制

Standardization & Compliance with Regulations

在模具方面,拱东有着标准化(拱东医疗企业标准或客户标准)的制造及技术要求,用以满足各个客户的不同需求。拱东医疗企业标准为:模具寿命大于8百万模次;模架钢材为4Cr13不锈钢或更高级别的钢材;模架精度控制在1丝1米以内;模仁为瑞典一胜百S136或同等级别钢材;模具标准件选用盘起或米思米标准件;热流道系统推荐使用高端品牌的针阀式热嘴。拱东一直采用最高标准,不断拓展应用领域与技术水平,使得模具能够适应各类情况。



Gongdong Medical sets mold specification and standard in mold and tooling making, maintenance and operation, in order to satisfy each customer special and different requirements or demand, could flexibly and optionally adopt Gong Dong Mold Standard or Customer determined standard. For example, if using Gongdong Medical Mold Standard, as the standard of mold life time, 8 Millions Shots will be warranted, without charging customer any extra cost. Stainless Steel such as 4Cr13 or 1.2085 steel be used in mold base, S136 or 1.2083ESR or super grade steel be used in mold core or cavity insert, mostly the flatness of mold base be controlled within 0.01mm per 1meter length, Punch or Misumi mold standardized components be used, and high-quality level hot runner system be recommended to use. Gongdong Medical always take the highest mold standard, and also focus on new technique and technology development and application, to upgrade and improve mold manufacturing level as well as adopt each project.







口服药用聚丙烯瓶盖 Oral medicinal PP caps





口服药用低密度聚乙烯瓶塞





聚乙烯口服给药器

PE Oral dosing syringe

- 用于口服给药,采用聚乙烯 (PE) 原料注塑生产。
- 规格: 3ml、5ml、10ml。
- For oral dosing. Using PE to conduct injection production.
- Specification:3ml, 5ml, 10ml



预灌封给药器

Prefilled drug applicator

- 采用聚丙烯 (PP) 原料注塑生产, 耐高温、 耐高压、灭菌、不变形。
- 盖子螺旋式设计,不漏液,不松脱。
- 规格: 5ml、10ml。
- Using PP to conduct injection production. High temperature and pressure resistance. Sterilization without deformation.
- Cap spiral design, no leakage, no loosening.
- Specification: 5ml, 10ml



聚丙烯给药器

PP drug applicator

- 用于利多卡因药液的预灌装,男性尿道 给药用。
- 规格: 10ml、20ml。
- For pre-filling of lidocaine liquid medicine, for male urethra use.
- Specification: 10ml, 20ml.



聚丙烯给药器

PP drug applicator

- 用于肛门药液的预灌装,肛门给药用,采用聚丙烯原料注塑生产。
- 规格: 1.5g。
- For pre-filling of anal liquid medicine, for anal dosing. Using PP to conduct injection production.
- Specification: 1.5g.





宠物药用滴管

Medicine dropper for animal use

- 用于兽药药剂的预灌装,采用聚丙烯原料注塑生产。
- 规格: 1.5ml、2.5ml。
- $\bullet \;\;$ For pre-filling of veterinary medicine. Using PP to conduct injection production.
- Specification: 1.5ml, 2.5ml

宠物药用塑料瓶

Medicine bottle for animal use

- 用于犬猫专用耳道清洁及护理药液包装。
- 规格: 3ml、5ml、10ml。
- For storing cleaning and nursing liquidused by dog and cat's ear canal.
- Specification:60ml, 120ml



动物用给药器

Drug applicator for animal use


- 用于兽药药剂的预灌装,采用聚乙烯 (PE)原料注塑生产。
- 规格: 3ml、5ml、10ml。
- For pre-filling of veterinary medicine.
 Using PE to conduct injection production.
- Specification: 3ml, 5ml, 10ml



动物用给药器

Drug applicator for animal use

- 马用口服药剂的预灌装,采用聚丙烯 (PP)原料注塑生产。
- For pre-filling of oral medication for horses use. Using PP to conduct injection production.

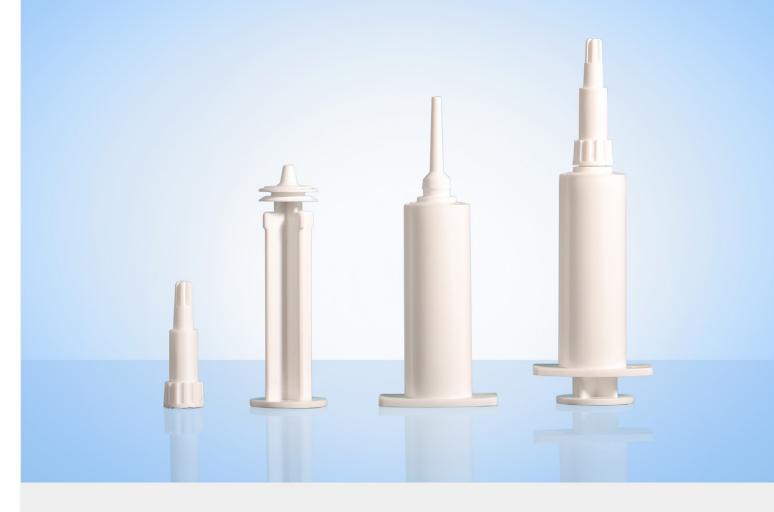

动物用给药器

Drug applicator for animal use





细胞培养瓶

Cells culture bottle

- 材质: 瓶身材料 PC 或 PET, 盖子采用聚乙烯制成。
- 瓶口防倒流设计,刻度清晰,每档刻度误差小于±5。
- 灭菌方式:伽马灭菌,无 DNA 酶,无 RNA 酶,无热源。
- PC 规格: 125ml、250ml、500ml、1000ml。
- PET 规格: 150ml、250ml、500ml、1000ml。

- Material: Bottle (PC/PET), Cap (PE).
- Bottle mouth anti-backflow design, clear scale, each scale error is less than ±5.
- Sterilization method: Gamma sterilization, DNase-free, RNase-free, Pyrogen-free.
- Specification (PC): 125ml、250ml、500ml、1000ml.
- Specification (PET): 150ml、250ml、500ml、1000ml.





细胞培养瓶 Cells culture bottle



阴道用聚丙烯给药器

PP Vaginal drug applicator


- 采用聚丙烯 (PP) 原料注塑生产,活塞 采用卤化丁基橡胶材料制造。
- 规格: 3g、4g、5g。
- Using PP to conduct injection production.
 Piston material: HIIR.
- Specification: 3g, 4g, 5g

阴道用聚丙烯给药器

PP Vaginal drug applicator





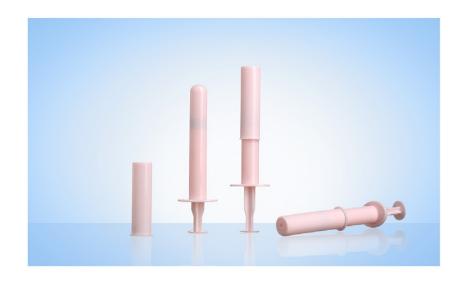

阴道用聚丙烯给药器

PP Vaginal drug applicator

- 采用聚丙烯 (PP) 原料注塑生产, 活塞采用卤化丁基橡胶材料制造。
- 规格: 3g、4g、5g。
- Using PP to conduct injection production. Piston material: HIIR.
- Specification: 3g, 4g, 5g





复方酮康唑用高密度聚乙烯瓶

HDPE bottle for compound ketoconazole

- 用于外用软性膏剂的灌装,使用方便灵活,污染小。
- 以高密度聚乙烯 (LDPE) 为主要原料,采用注塑成型工艺生产。
- Using LDPE to conduct injection production.
- Made of High Density Polyethylene, plastic injection molding.

